

soffioni a soffitto


9926G4 / 9926G5 / 9926G6 / 9926G7
9926G8 / 9926G9 / 9926H1
9926H2 / 9926H3

PALAZZANI


Istruzioni di montaggio
Mounting instructions
Instructions de montage
Montageanleitung
Instrucciones de montaje




9926G9

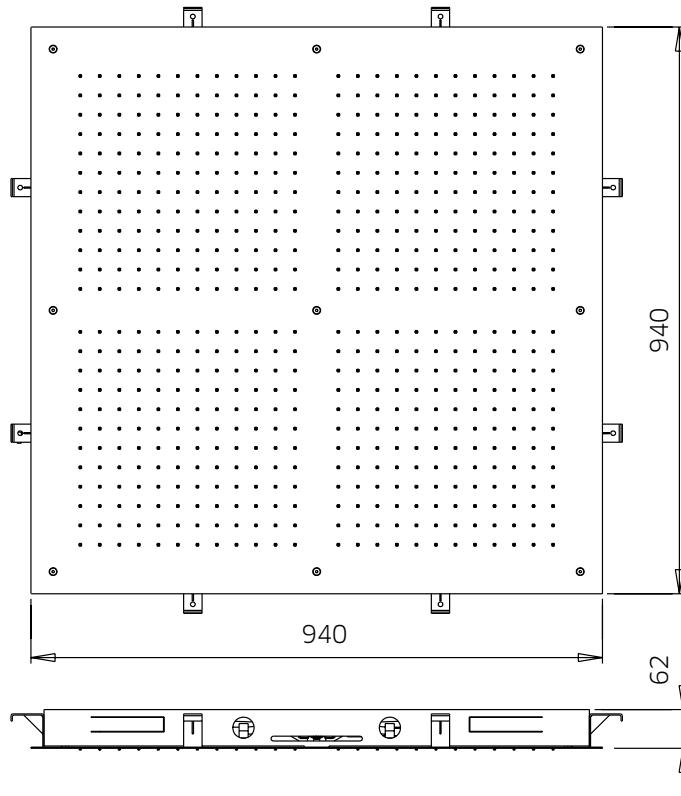


9926G4

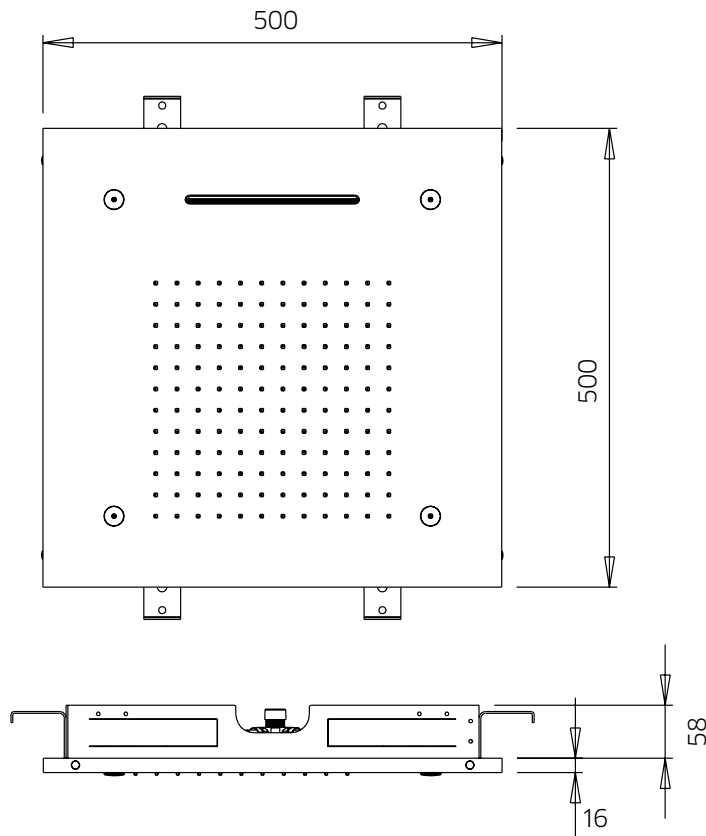


9926G5

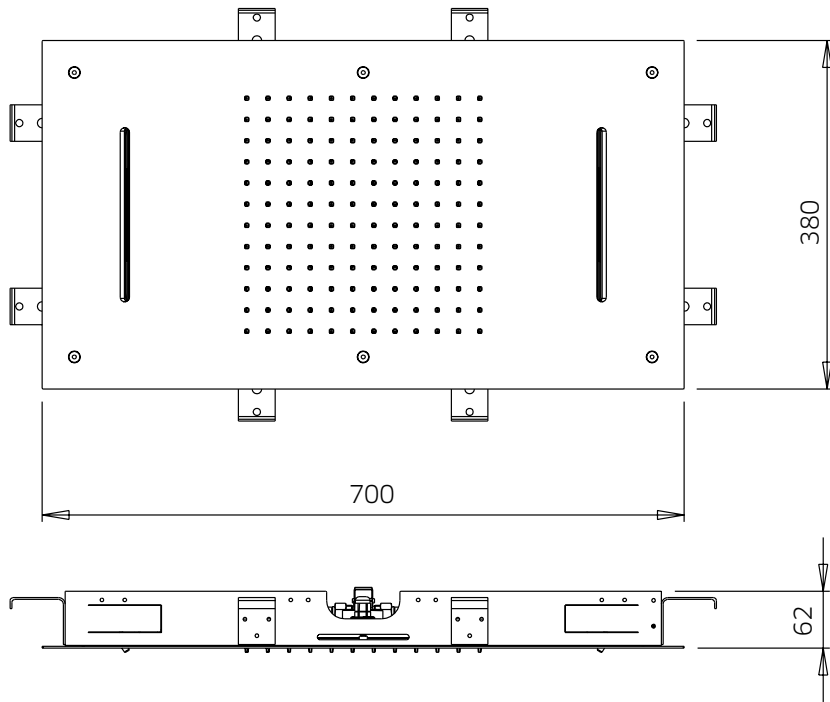


9926G7

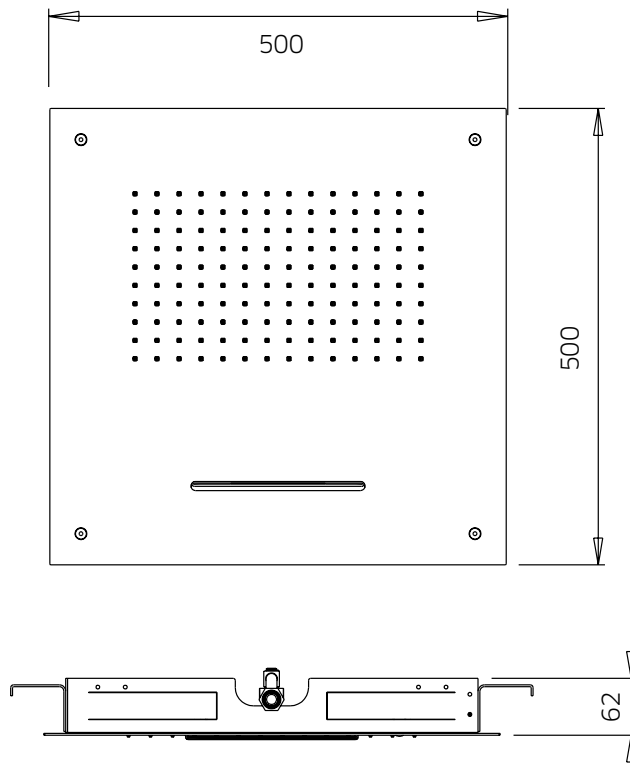


9926G8

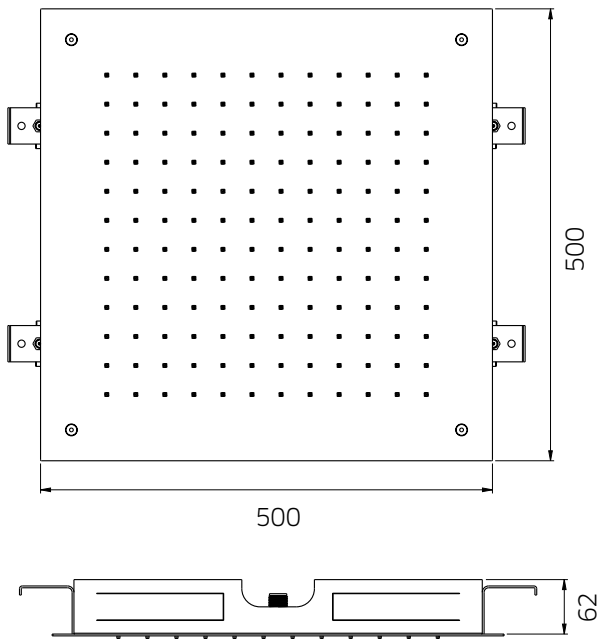


9926G6

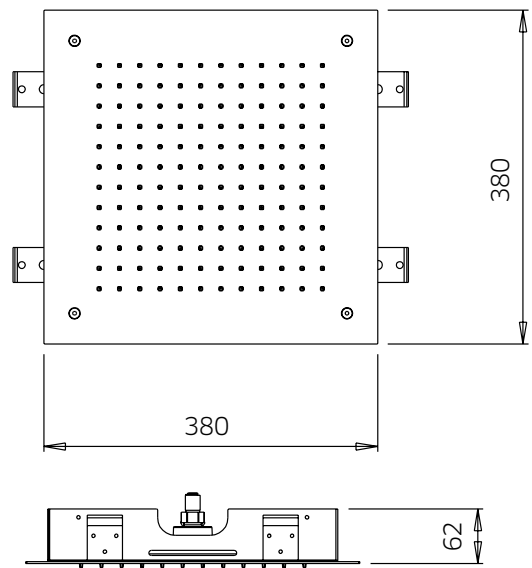


9926H1


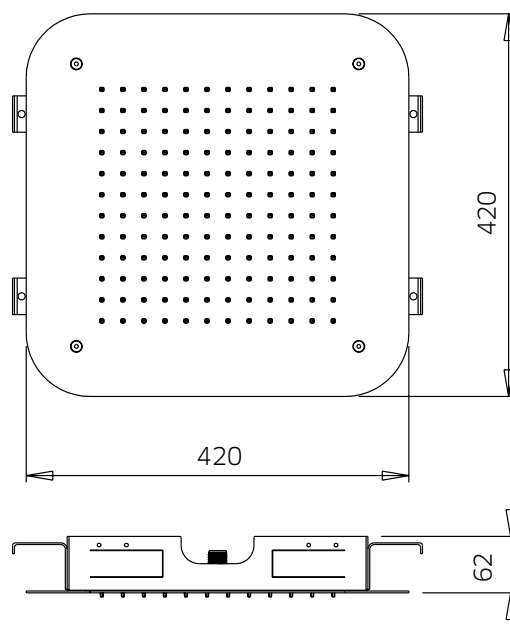


9926H3




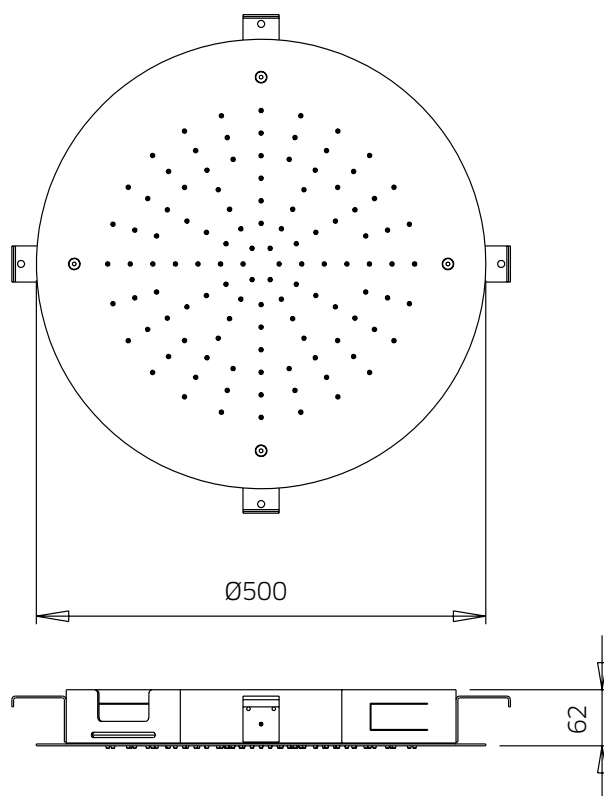


9926H2

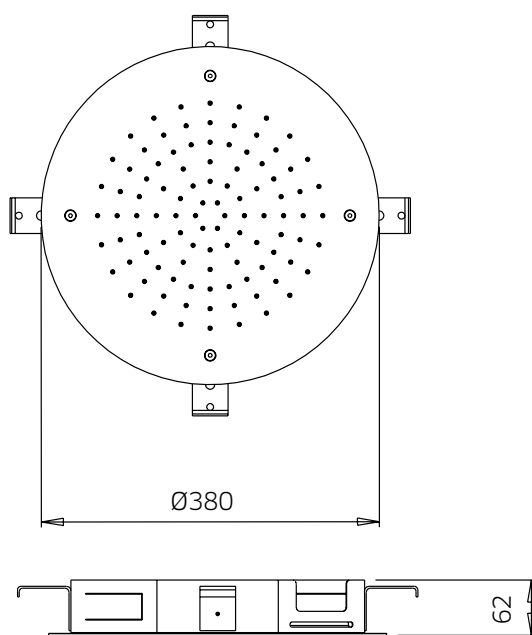


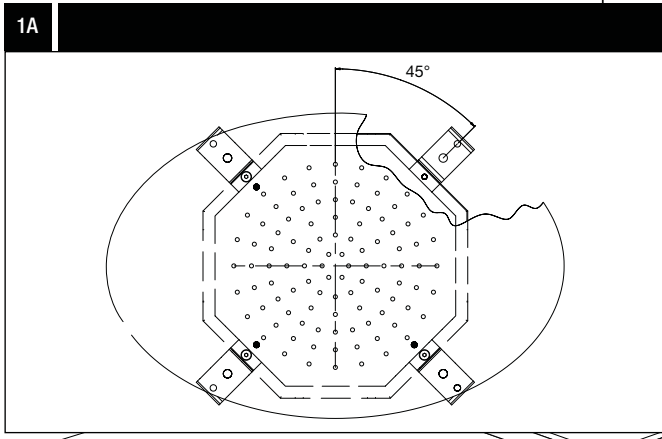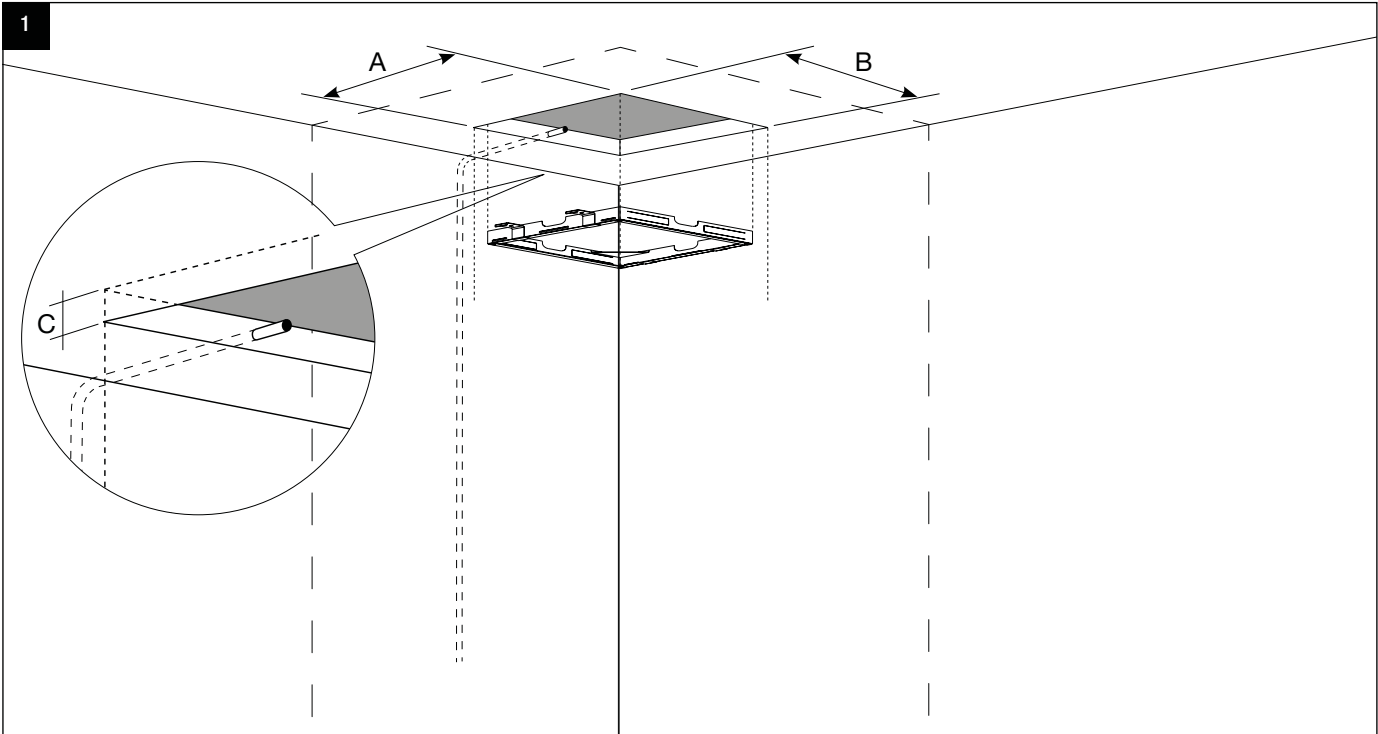


A	B	C	D
		min. 7,5 cm	45 cm
		min. 7,5 cm	54 cm
		min. 7,5 cm	45 cm
		min. 7,5 cm	54 cm
45 cm	45 cm	min. 7,5 cm	
57 cm	57 cm	min. 7,5 cm	
100 cm	100 cm	min. 6,5 cm	
45 cm	45 cm	min. 7,5 cm	
77 cm	45 cm	min. 7,5 cm	
57 cm	97 cm	min. 7,5 cm	

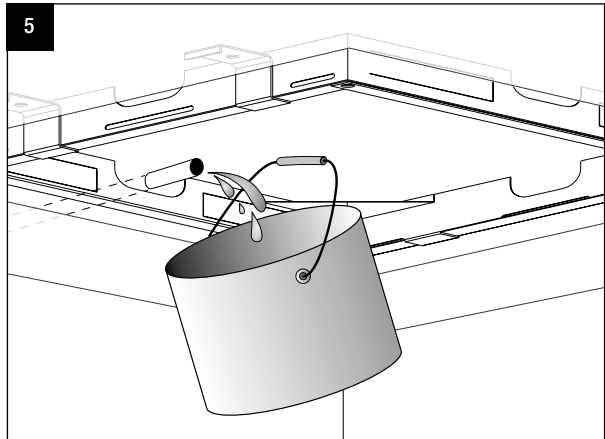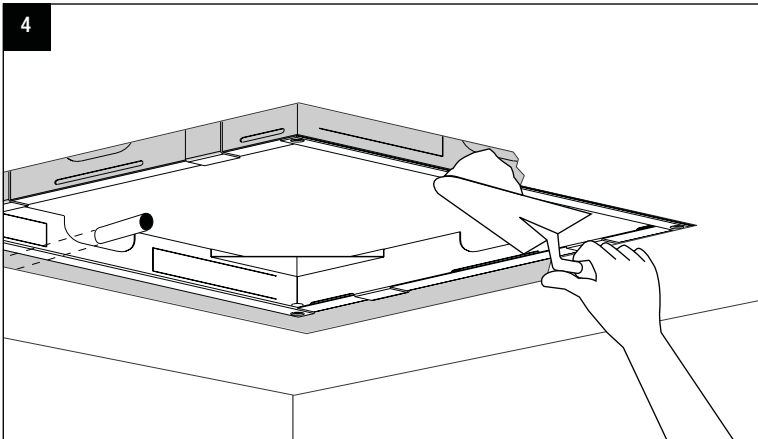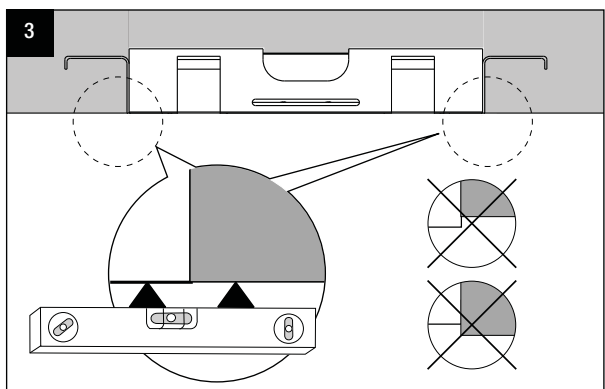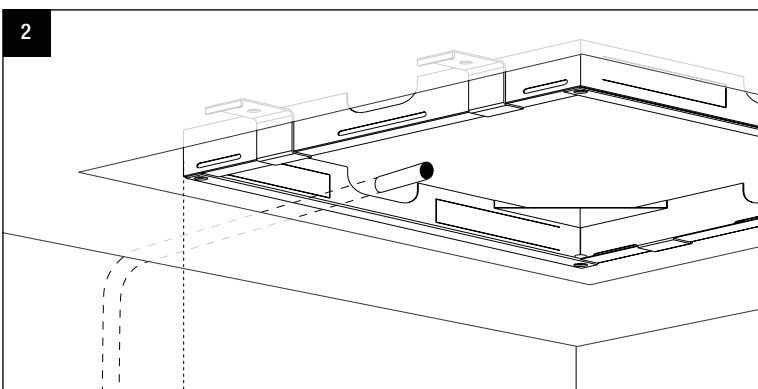


1B

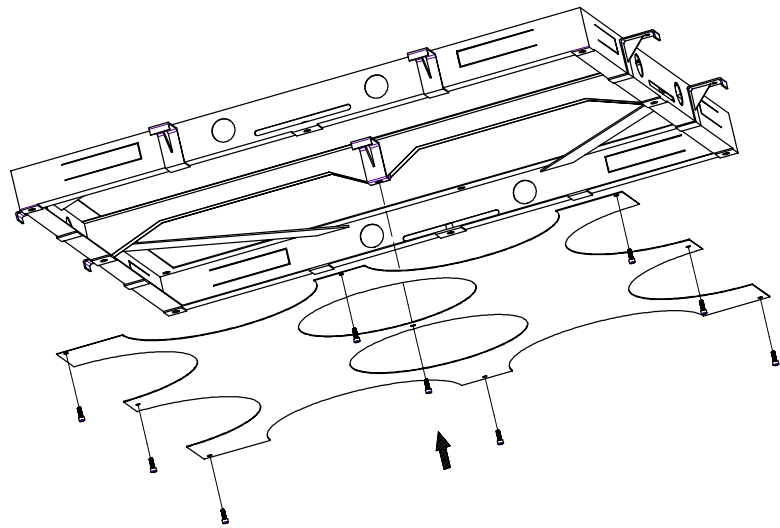


1C

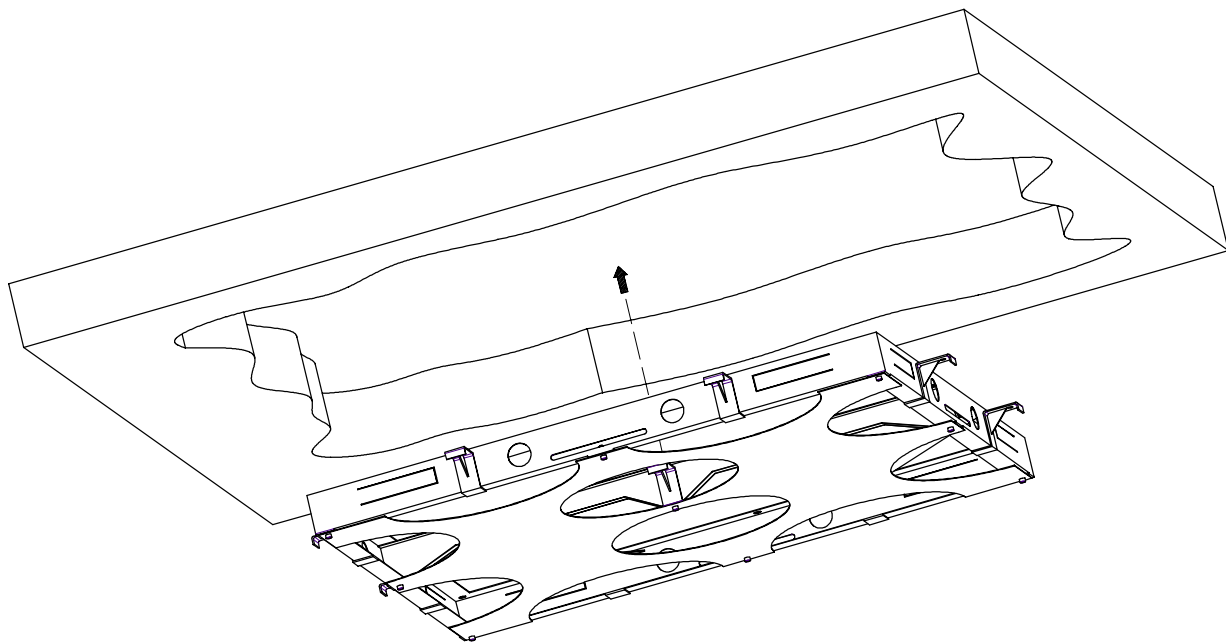


1D

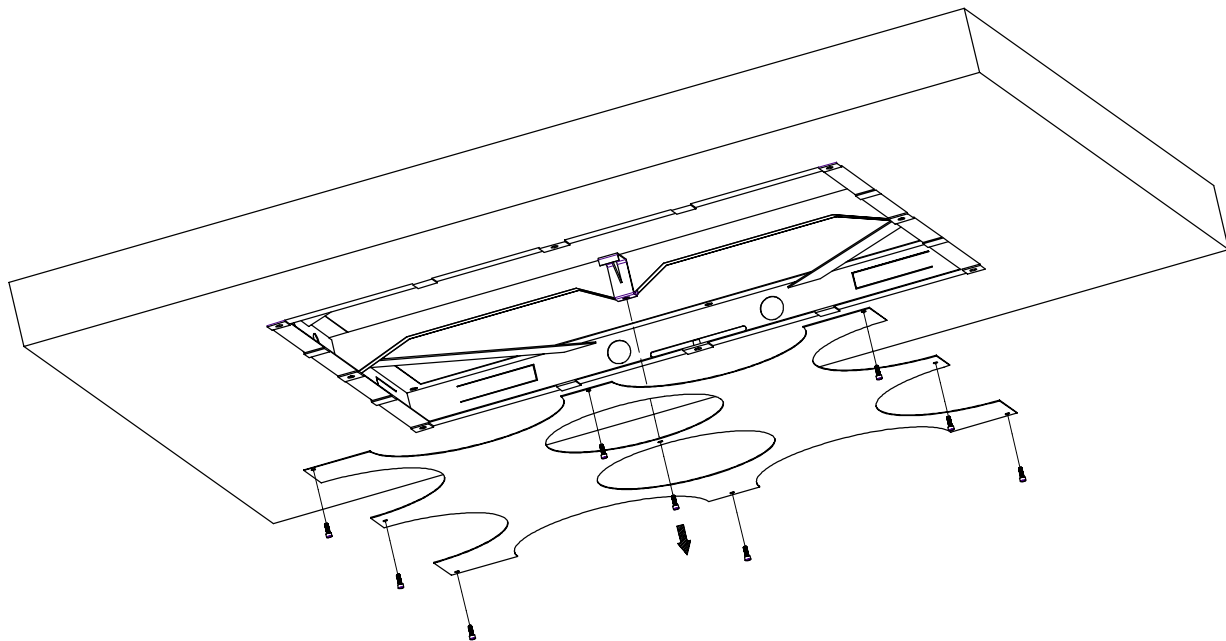


6



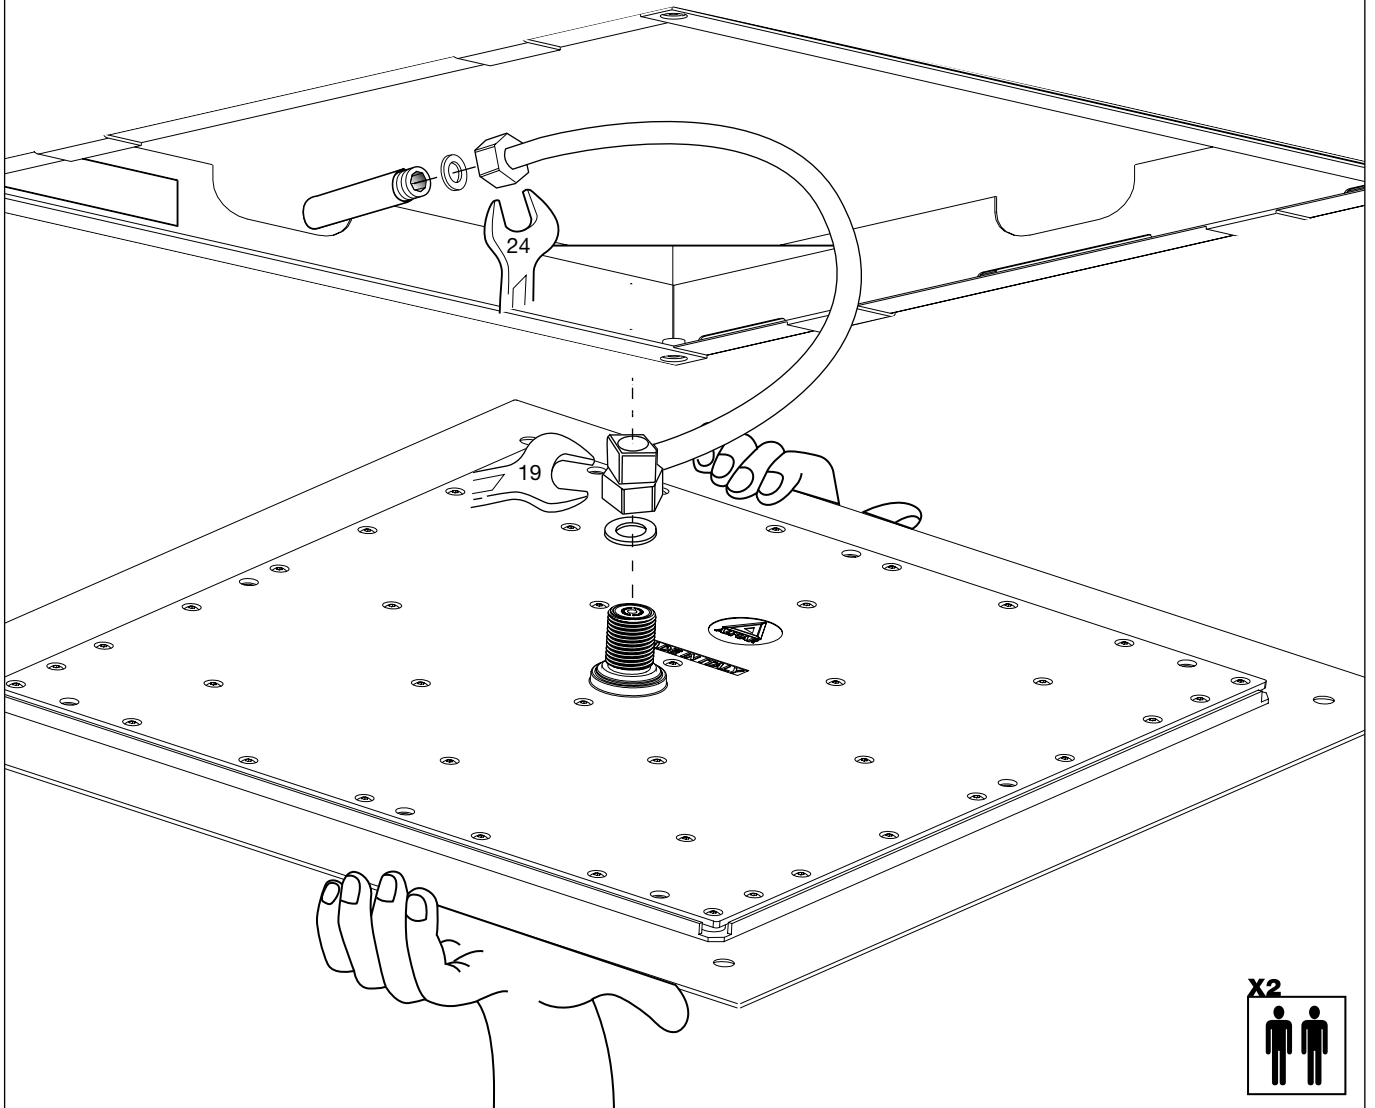


7

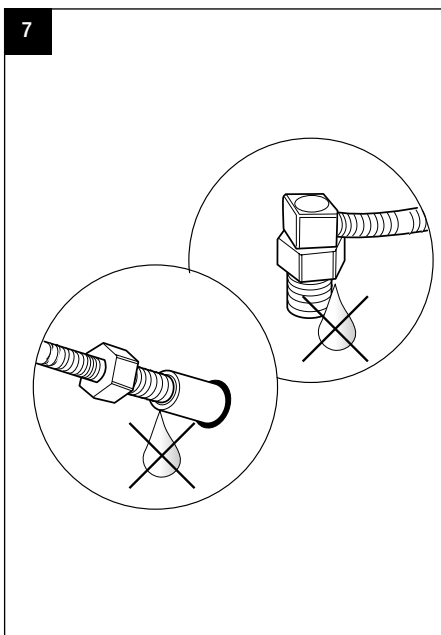


8





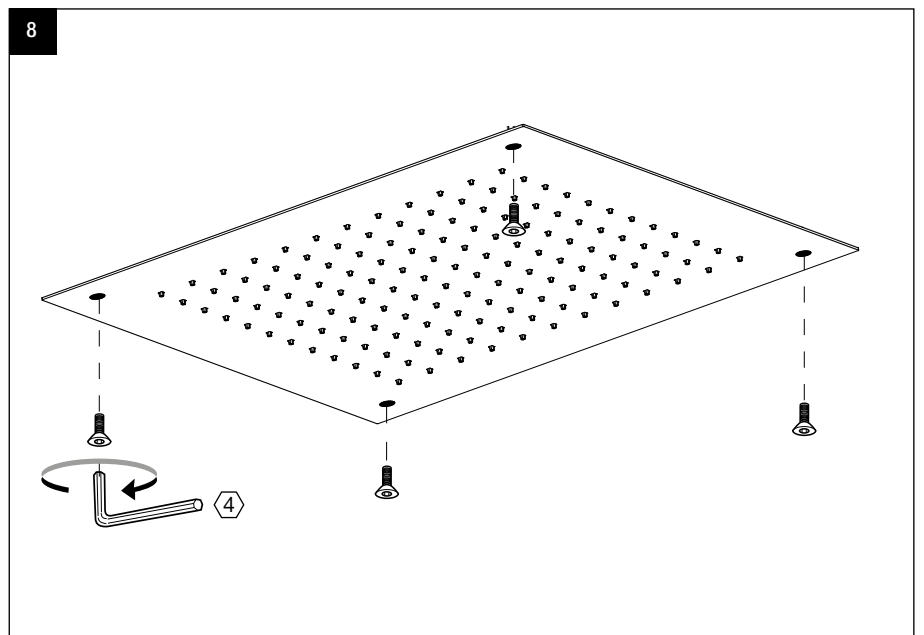


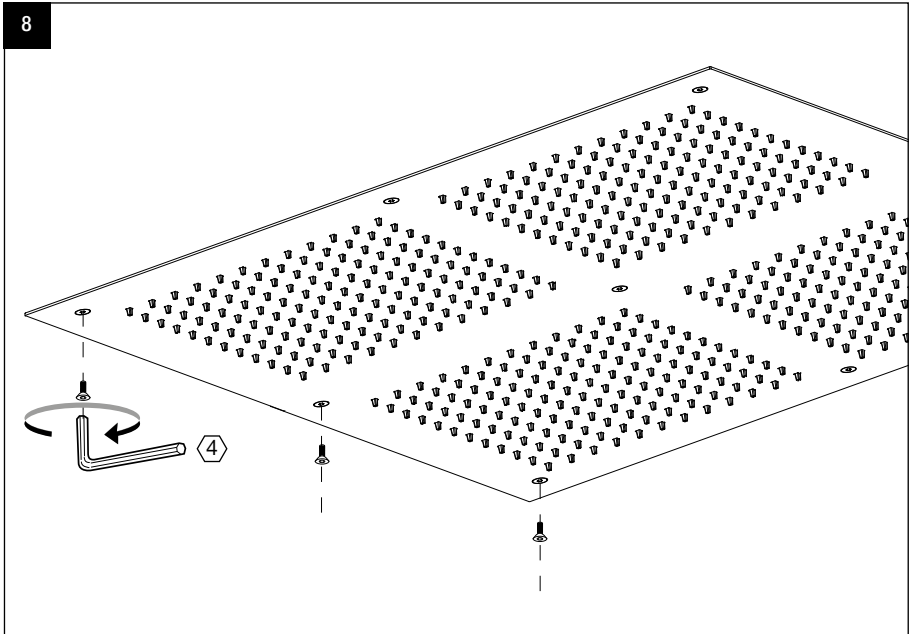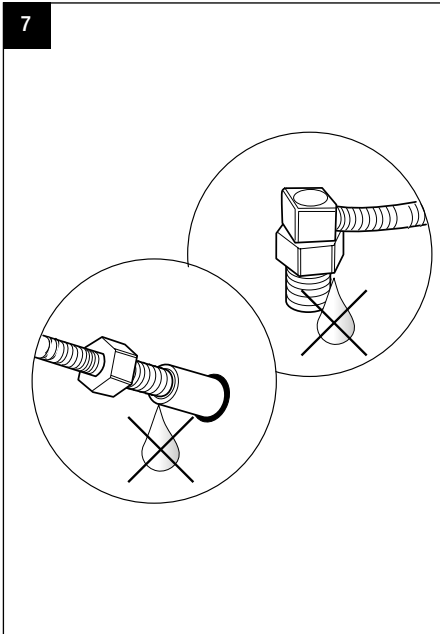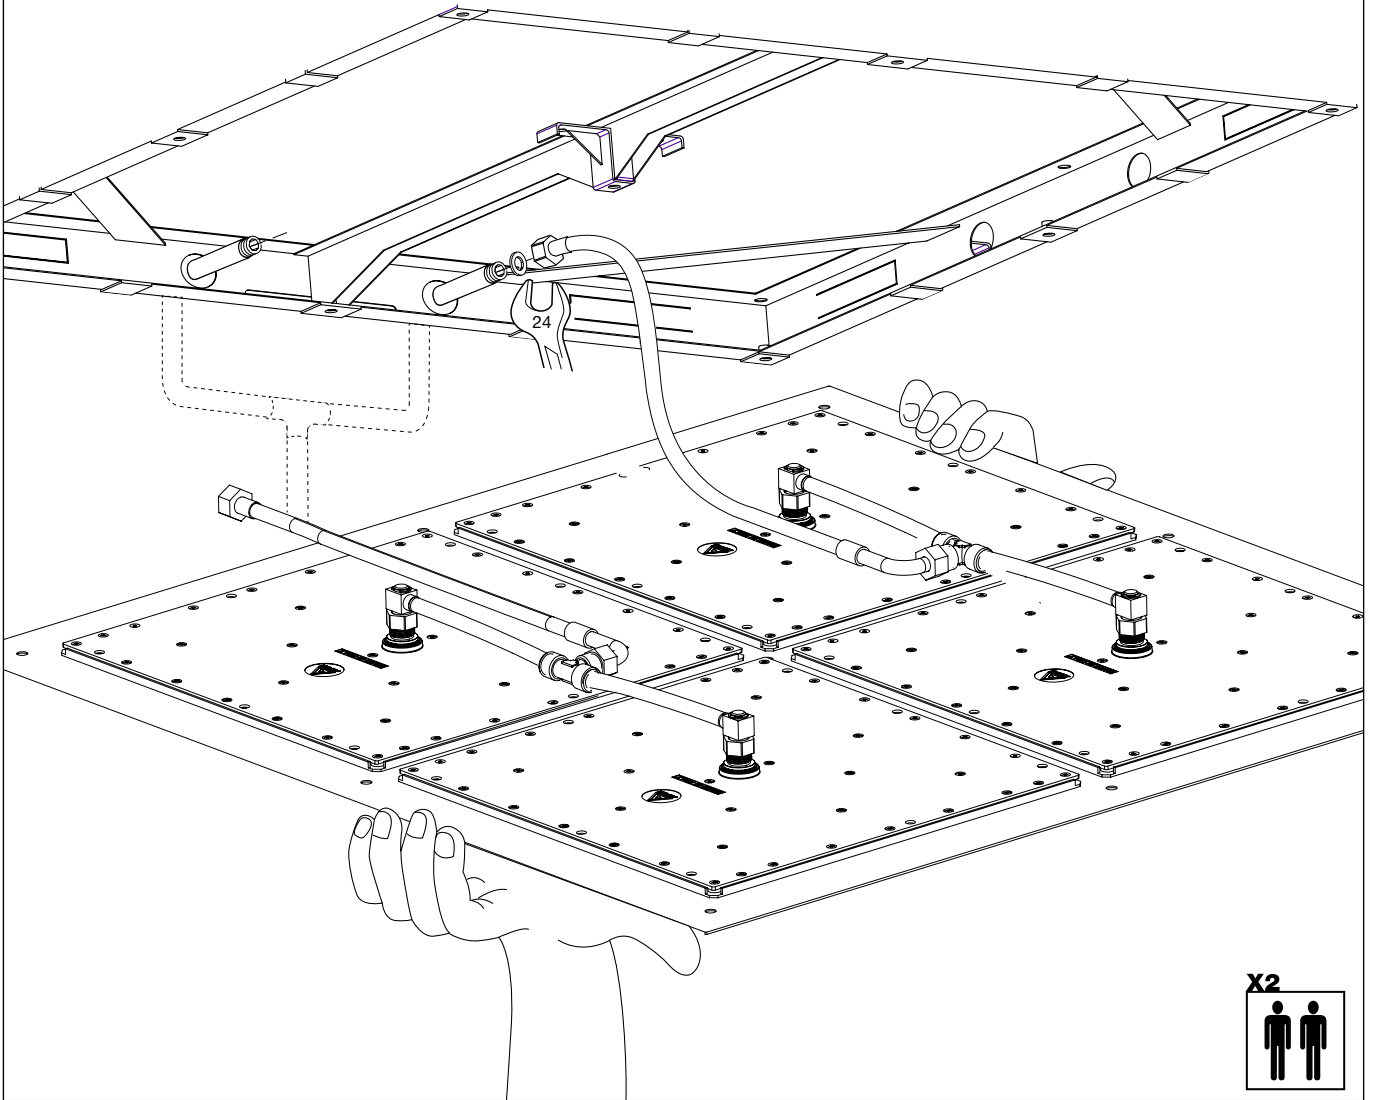

cleaning



Suggerimenti per la pulizia
Cleaning Tips
Conseils de nettoyage
Reinigung Tipps
Consejos de limpieza

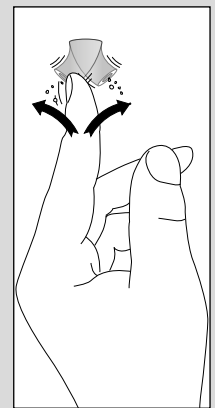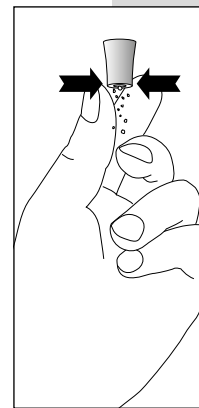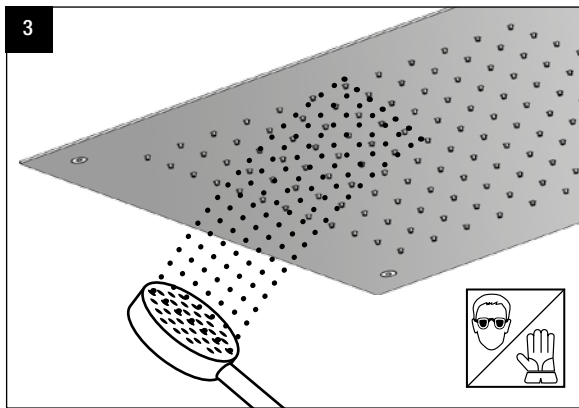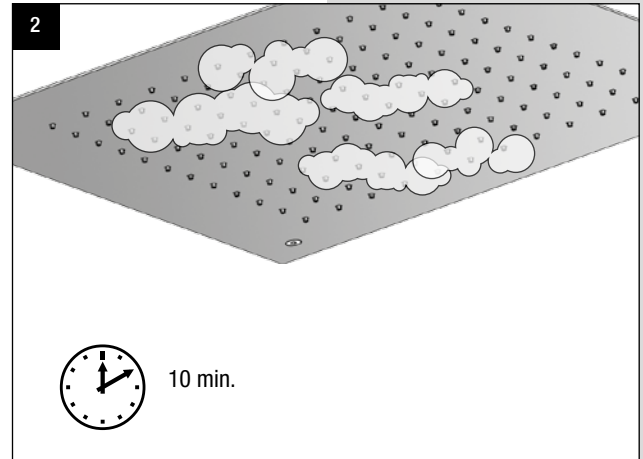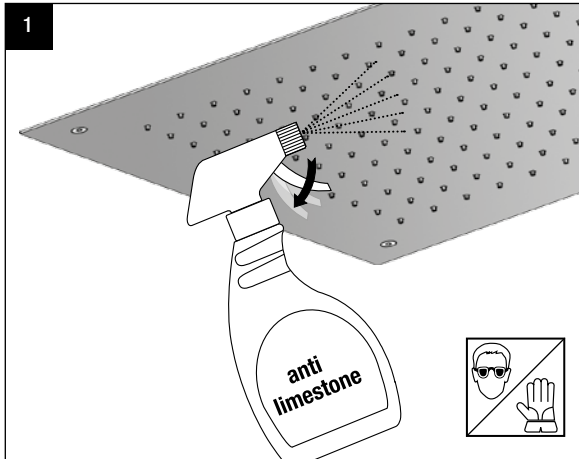

optional

Kit di sicurezza per controsoffittature non portanti
Kit de sécurité pour les faux-plafonds pas auto-portants
Sicherheitskit für nicht tragende zwischendecke
Security kit for non-bearing false ceiling
Kit de seguridad para encastrar a techo sin apoyo

